 
 



Channel Link Scan

- 1 To link certain lower limit channel of certain bank to certain upper limit channel of certain bank, step following. For example, Bank 1, channel 20 to Bank 1, channel 80.


While you are in SCAN mode, press **PROG** key and press **SCAN**. PROG in display start blinking with current linked lower limit and upper limit.



 
Enter new lower limit, 1 2 0




Then press ENT

 

Enter new upper limit 1 8 0

 

Then press ENT

 

While you are in channel link scan mode, PROG display keeps blinking and **AE 300** refuse to accept your entering of new bank designation. If you press **SCAN** key once, **AE 300** goes to bank link scan mode. To go back to channel link scan mode, press **PROG SCAN SCAN**.

- 2 If you wish to lock out a specific channel within a bank then, while that channel is being monitored, press: **L.OUT**.
- 3 Unlocking a channel (locked by following 4) is accomplished by manually recalling that memory and pressing **L.OUT** so that the L.OUT legend stops flashing on the display.

- 4 To lock out a whole bank press: **PROG BANK SCAN** and then LCD goes blank out and display **SCAN**, **PROG** and **BANK** plus bank number. Use UP or DOWN key or **DIAL** to select the bank number to lock out. Press **L.OUT** key to lock that bank number out. L.OUT in display start blinking.
- 5 To unlock the locked out bank press: **PROG BANK SCAN** and then LCD goes blank out display **SCAN**, **PROG** and **BANK** plus bank number. Use UP or DOWN key or **DIAL** to find locked out bank which is indicated by blinking L.OUT display in LCD. Press **L.OUT** key to unlock that bank number. L.OUT in display then disappear.